## **Olympus Power Pvt.Ltd.**



## **Technical Features**

	SO20096	
Туре	MPPT SOLAR CHARGE CONTROLLER	
Model	SO20096	
	<u>INPUT</u>	
$100V \sim 300V$ (Wide input voltage range)		
Input Voltage Range	180V ~ 260V (Normal input voltage range)	
Nominal Input Voltage(s) Supported	220V AC , 50Hz	
Input connection type	Hard Wire	
BATTERY Full Load Runtime (minutes)	Depends on Load & Battery AH	
No of Battery	8	
Solar Charge Controller		
Туре	MPPT/PWM	
Max.PV Open Circuit Array Volatge	176VDC	
Charge Algorithm	3-stage Bulk / Acceptance / Float Plus Equalize	
LCD Display	Backlit, Alphanumeric Display showing battery voltage, DC amperage, Cumulative KWH hours	
	<u>OUTPUT</u>	
Output Volt Amp Capacity (VA)	20000	
Output Watt Capacity (watts)	16000W	
DC System Voltage (VDC)	96V	
Load Capacity	>110% faulty after 300ms	
Phases	1Phase - 3 Wire (L.N.E)	
Output AC waveform	Pure Sine Wave	
Efficiency	> 88%	
	GENERAL	
LCD / LEDs Indications	UPS ON (Yellow), Battery Low (Red), Mains ON (Green), Charging (Green), Overload(Red)	
Alarms	Audible alarm indicates power failure and overload conditions	
Switches	1)Switch control off / on power status	
	2)Switch for mains input voltage range	
	3)Switch to select the maximum charging voltage	
Protection	> 300% Load (with manual reset function)	
Cooling Method	Forced air cooled	
Transfer Time	Battery to line mode : 300 milliseconds / Line to battery mode : 300 milliseconds	
Housing Material	Powder coated / painted MS	
ENVIRONMENTAL		
Operating Temperature Range	0°C to 50°C	
Relative Humidity	95% (non-condensing)	
Degree of Protection	IP 20	
BATTERY		
No of Battery	8	
Battery Charging Profile(Boost /Foat)	Suitable according to Battery type (eg :VRLA/SMF/Wet Lead Acid	

## **Olympus Power Pvt.Ltd.**





SO20096		
Max Charging Current(when battery is fully discharge)	10A ±2amp	
SPECIAL FEATURES		
Cold Start (startup in battery mode during a power failure)	Cold-start operation supported	
Charge End Voltage	Grid charging stop when battery reaches $13.8V \pm 0.2V$ and transfer to backup mode (per battery)	
Grid Recharge Voltage	Grid charging starts when battery reaches $11V \pm 0.2V$ and transfer to grid (per battery)	
CERTIFICATIONS		
Quality Certifications	ISO 9001:2008	
	WARRANTY	
Product Warranty Period	1 - year limited warranty	

We are committed to continuous development of our products, the specification are subject to change without notice.