Olympus Power Pvt.Ltd.





	<u>I comincal i catul es</u>
SO2548	
Туре	MPPT SOLAR CHARGE CONTROLLER
Model	SO2548
	<u>INPUT</u>
Input Voltage Range	100V ~ 300V (Wide input voltage range)
	180V ~ 260V (Normal input voltage range)
Nominal Input Voltage(s) Supported	220V AC , 50Hz
Input connection type	Hard Wire
BATTERY Full Load Runtime (minutes)	Depends on Load & Battery AH
No of Battery	4
	Solar Charge Controller
Туре	MPPT/PWM
Max.PV Open Circuit Array Volatge	88VDC
Charge Algorithm	3-stage Bulk / Acceptance / Float Plus Equalize
LCD Display	Backlit, Alphanumeric Display showing battery voltage, DC amperage, Cumulative KWH hours
	<u>OUTPUT</u>
Output Volt Amp Capacity (VA)	2500
Output Watt Capacity (watts)	2000W
DC System Voltage (VDC)	48V
Load Capacity	>110% faulty after 300ms
Phases	1Phase - 3 Wire (L.N.E)
Output AC waveform	Pure Sine Wave
Efficiency	> 88%
	GENERAL
LCD / LEDs Indications	UPS ON (Yellow), Battery Low (Red), Mains ON (Green), Charging (Green), Overload(Red)
Alarms	Audible alarm indicates power failure and overload conditions
Switches	1)Switch control off / on power status
	2)Switch for mains input voltage range
	3)Switch to select the maximum charging voltage
Protection	> 300% Load (with manual reset function)
Cooling Method	Forced air cooled
Transfer Time	Battery to line mode : 300 milliseconds / Line to battery mode : 300 milliseconds
Housing Material	Powder coated / painted MS
	ENVIRONMENTAL
Operating Temperature Range	$0^{\circ}C$ to $50^{\circ}C$
Relative Humidity	95% (non-condensing)
Degree of Protection	IP 20
	BATTERY
No of Battery	4
Battery Charging Profile(Boost /Foat)	Suitable according to Battery type (eg : VRLA/SMF/Wet Lead Acid

Olympus Power Pvt.Ltd.



Technical Features

<u>SO2548</u>		
Max Charging Current(when battery is fully discharge)	10A ±2amp	
SPECIAL FEATURES		
Cold Start (startup in battery mode during a power failure)	Cold-start operation supported	
Charge End Voltage	Grid charging stop when battery reaches $13.8V \pm 0.2V$ and transfer to backup mode (per battery)	
Grid Recharge Voltage	Grid charging starts when battery reaches $11V \pm 0.2V$ and transfer to grid (per battery)	
CERTIFICATIONS		
Quality Certifications	ISO 9001:2008	
	WARRANTY	
Product Warranty Period	1 - year limited warranty	

We are committed to continuous development of our products, the specification are subject to change without notice.