Olympus Power Pvt.Ltd.

Technical Features



SO312

	50312
Туре	MPPT SOLAR CHARGE CONTROLLER
Model	SO312
	<u>INPUT</u>
Input Voltage Range	100V ~ 300V (Wide input voltage range)
	180V ~ 260V (Normal input voltage range)
Nominal Input Voltage(s) Supported	220V AC , 50Hz
Input connection type	Hard Wire
BATTERY Full Load Runtime (minutes)	Depends on Load & Battery AH
No of Battery	1
	Solar Charge Controller
Туре	MPPT/PWM
Max.PV Open Circuit Array Volatge	22VDC
Charge Algorithm	3-stage Bulk / Acceptance / Float Plus Equalize
LCD Display	Backlit, Alphanumeric Display showing battery voltage, DC amperage, Cumulative KWH hours
	OUTPUT
Output Volt Amp Capacity (VA)	300
Output Watt Capacity (watts)	240W
DC System Voltage (VDC)	12V
Load Capacity	>110% faulty after 300ms
Phases	1Phase - 3 Wire (L.N.E)
Output AC waveform	Pure Sine Wave
Efficiency	> 88%
Efficiency	GENERAL
LCD / LEDs Indications	UPS ON (Yellow), Battery Low (Red), Mains ON (Green), Charging
	(Green), Overload(Red)
Alarms	Audible alarm indicates power failure and overload conditions
Switches	1)Switch control off / on power status
	2)Switch for mains input voltage range
	3)Switch to select the maximum charging voltage
Protection	> 300% Load (with manual reset function)
Cooling Method	Forced air cooled
Transfer Time	Battery to line mode: 300 milliseconds / Line to battery mode: 300
	milliseconds
Housing Material	Powder coated / painted MS
	ENVIRONMENTAL
Operating Temperature Range	0°C to 50°C
Relative Humidity	95% (non-condensing)
Degree of Protection	IP 20
-6	BATTERY
No of Battery	1
Battery Charging Profile(Boost /Foat)	Suitable according to Battery type (eg: VRLA/SMF/Wet Lead Acid

Olympus Power Pvt.Ltd. <u>Technical Features</u>



<u>SO312</u>		
Max Charging Current(when battery is fully discharge)	10A ±2amp	
SPECIAL FEATURES		
Cold Start (startup in battery mode during a power failure)	Cold-start operation supported	
Charge End Voltage	Grid charging stop when battery reaches 13.8V ±0.2V and transfer to backup mode (per battery)	
Grid Recharge Voltage	Grid charging starts when battery reaches 11V ±0.2V and transfer to grid (per battery)	
<u>CERTIFICATIONS</u>		
Quality Certifications	ISO 9001:2008	
WARRANTY		
Product Warranty Period	1 - year limited warranty	

We are committed to continuous development of our products, the specification are subject to change without notice.