Olympus Power Pvt.Ltd.

Technical Features



C	\cap	5 1	04)
2	U	נכ	192	′

	<u>803192</u>
Туре	MPPT SOLAR CHARGE CONTROLLER
Model	SO5192
	<u>INPUT</u>
Input Voltage Range	100V ~ 300V (Wide input voltage range)
input voitage Kange	180V ~ 260V (Normal input voltage range)
Nominal Input Voltage(s) Supported	220V AC , 50Hz
Input connection type	Hard Wire
BATTERY Full Load Runtime (minutes)	Depends on Load & Battery AH
No of Battery	16
•	Solar Charge Controller
Туре	MPPT/PWM
Max.PV Open Circuit Array Volatge	352VDC
Charge Algorithm	3-stage Bulk / Acceptance / Float Plus Equalize
LCD Display	Backlit, Alphanumeric Display showing battery voltage, DC amperage, Cumulative KWH hours
	<u>OUTPUT</u>
Output Volt Amp Capacity (VA)	5000
Output Watt Capacity (watts)	4000W
DC System Voltage (VDC)	192V
Load Capacity	>110% faulty after 300ms
Phases	1Phase - 3 Wire (L.N.E)
Output AC waveform	Pure Sine Wave
Efficiency	> 88%
zmerency	GENERAL
	UPS ON (Yellow), Battery Low (Red), Mains ON (Green), Charging
LCD / LEDs Indications	(Green), Overload(Red)
Alarms	Audible alarm indicates power failure and overload conditions
	1)Switch control off / on power status
Switches	2)Switch for mains input voltage range
	3)Switch to select the maximum charging voltage
Protection	> 300% Load (with manual reset function)
Cooling Method	Forced air cooled
	Battery to line mode: 300 milliseconds / Line to battery mode: 300
Transfer Time	milliseconds
Housing Material	Powder coated / painted MS
	ENVIRONMENTAL
Operating Temperature Range	0°C to 50°C
Relative Humidity	95% (non-condensing)
Degree of Protection	IP 20
	BATTERY
No of Battery	16
Battery Charging Profile(Boost /Foat)	Suitable according to Battery type (eg:VRLA/SMF/Wet Lead Acid

Olympus Power Pvt.Ltd. <u>Technical Features</u>



<u>SO5192</u>				
Max Charging Current(when battery is fully discharge)	10A ±2amp			
SPECIAL FEATURES				
Cold Start (startup in battery mode during a power failure)	Cold-start operation supported			
Charge End Voltage	Grid charging stop when battery reaches 13.8V ±0.2V and transfer to backup mode (per battery)			
Grid Recharge Voltage	Grid charging starts when battery reaches 11V ±0.2V and transfer to grid (per battery)			
<u>CERTIFICATIONS</u>				
Quality Certifications	ISO 9001:2008			
	WARRANTY			
Product Warranty Period	1 - year limited warranty			

We are committed to continuous development of our products, the specification are subject to change without notice.